

LED T5 TUBE EB SERIES



Instruction Manual

LED T5 2F EB Tube 安裝說明書

AMRI ENTERPRISE CO., LTD. TAIWAN LEADERS CENTER,8FA2

NO,29 HAI-PIEN ROAD,KAOHSIUNG,TAIWAN,R.O.C

http://www.amriled.com

TEL: 886-7-3353075 FAX: 886-7-3389030





Product Name: <u>LED T5 2F EB Tube</u> Product Model: <u>AM5EB2FXXK</u> **MIRI**

Note: Suitable HE Electronic Ballast

Item	AM5EB2FXXK-AL
Rated Voltage	In accordance with electric ballast
Rated Current	145~170mA
Rated Power	9W±1W
Fire Protection Class	UL94V-2

- Packing List: Led T5 2F
- 二、Replace T5(G5) fluorescent lamp 14W
- \equiv No modifications of the luminaire which the LED lamp is to be used with are to be made.
- extstyle ex
- \pm "This lamp is designed for general lighting service (excluding for example explosive atmospheres)."


Graphical instruction




Schematic steps of removing a fluorescent lamp and inserting LED lamp



Switch off electricity.

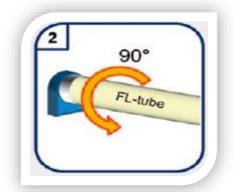

Secure the position by turning the lamp by 90°

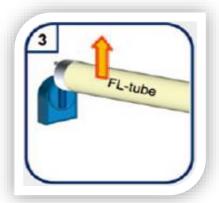

Remove the conventional lamp.



Insert the LED lamp into the lamp holder.




Secure the position by turning the lamp by 90° .




Switch on electricity and check for lamp starting.

Note:




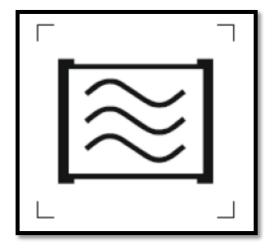


Lamp suitable for Electronic Ballast

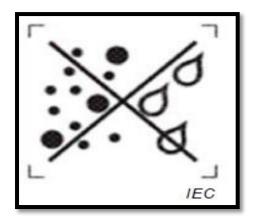

Lamp to be used in dry conditions or in a luminaire that provides protection

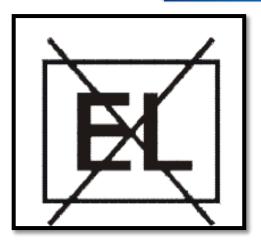

Lamp not suitable for emergency operation

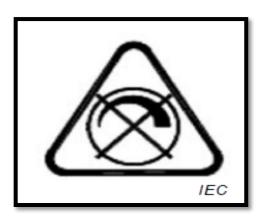

Dimming not allowed

LED T8/T5 TUBE

MRI

EB SERIES

Application

Supermarket



School




Hospital



Factory



Office

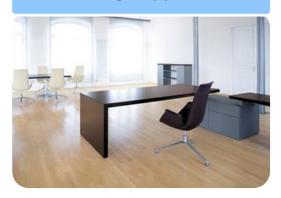

Public transit

